GasCheck Tesla

Instrument User Manual V1.1R



Register your instrument online to receive your extended warranty.

Unrivalled Gas Detection.

Register your instrument online for extended warranty

Thank you for purchasing your Ion Science instrument.

The standard warranty of your instrument can be extended to up to five years on PhoCheck Tiger and two years on other Ion Science instruments.

To receive your extended warranty, you must register your instrument online within one month of purchase (terms and conditions apply.)

Visit ionscience.com/instrument-registration

Unrivalled Gas Detection.

Declaration of conformity

Manufacturer: Ion Science Ltd, The Hive, Butts Lane, Fowlmere, Cambridge, England. SG8 7SL

Product: GasCheck Tesla

Product description: a handheld micro thermal conductivity sensor used to detect gas leaks. This instrument has been designed specifically for search and location of non-flammable gases such as helium and CFC's.

Directives: 2004/108/EC

Electrical Equipment – Electromagnetic Compatibility (EMC)

Standards: BS EN 61010-1:2010

BS EN ISO 9001:2008 BS EN 61326-1:2006 Safety requirements for electrical equipment for measurement, Control and laboratory use – Part 1: General requirements Quality management systems – Requirements Electrical Equipment for measurement, control and laboratory use - EMC Requirements (Class B and General Immunity)

I the undersigned hereby declare that the equipment specified above conforms to the stated Directives and Standards.

Signed By:

Name: Mark Stockdale, Position: Technical Director Date: 30th October 2008

Unrivalled Gas Detection. Page 3 of 25

Contents

Declaration of conformity	
Statements	5
Safety	5
Quality Assurance	
Responsibility of use	5
Disposal	
Calibration Facility	
Legal Notice	
Instrument Description	
Packing list	
How GasCheck Tesla works	
Thermal Conductivity	
Instrument main menu	
Running screen	
Gas selection	
Sensitivity	
Battery status	
Backlight	
Gas measurement	
Sound indication	
Bar graph	
Peak hold	
Functions	
Contrast	
Backlight	
Sound	
Peak hold	
Calibration	
Battery selection	
View Data	
Units	
Display	
Gas selection	
Getting started	
The Keypad	
Using GasCheck Tesla	
The GasCheck Tesla instrument	
GasCheck Tesla fan current montior	-
Probe options	
Detecting leaks	
Overview	
Calibration	
Over view	
Selecting Factory or Custom Calibration	
Calibration procedure using 'ppm' units Calibration procedure using 'cc/sec' units	
Replacing batteries Instrument specification	
Replacement parts	
Instrument warranty and service	
Warranty	
Service	
Contact details	
Manual log	
manual log	. 23

Unrivalled Gas Detection. Page 4 of 25

Statements

Safety

Please read this manual in full before using the GasCheck Tesla instrument. Ion Science Ltd takes no responsibility for damage, injury or death resulting from misuse, misunderstanding or negligence while using this gas detector. Please contact Ion Science Limited via the address below for clarification on any aspect of this manual that is not understood or for additional information required.

This instrument should only be used by qualified or competent persons with suitable knowledge of the hazards relating to the gases contained within equipment or in the local environment.

Quality Assurance

GasCheck Tesla instruments are manufactured in compliance with ISO9001:2008, which ensures that the equipment supplied to the customer has been designed and assembled reproducibly from traceable components, leaving Ion Science calibrated to traceable standards.

Responsibility of use

Many gases are hazardous and can cause explosion, poisoning and corrosion resulting in damage to property and life. It is the responsibility of the person using this instrument to ensure it is being used in accordance with this manual and that the instrument is functioning correctly before use.

The GasCheck Tesla can detect a large range of gases but some gases are more difficult to detect. It is the responsibility of the user to ensure the GasCheck Tesla instrument has the sensitivity to detect the required gas before reaching potentially dangerous levels.

Inadequate performance of the gas detection equipment described in this manual may not necessarily be self-evident and consequently equipment must be regularly inspected and maintained. Ion Science recommends that personnel responsible for equipment use institute a regime of regular checks to ensure it performs within calibration limits, and that a record be maintained which logs calibration check data. The equipment should be used in accordance with this manual, and in compliance with local safety standards.

Disposal

Disposal of GasCheck Telsa, its components and any used batteries shall be in accordance with local and national safety and environmental requirements. This includes the European WEEE (Waste Electrical and Electronic Equipment) directive. Ion Science Ltd offers a 'take-back' service. Please contact Ion Science Ltd for more information.

Calibration Facility

Ion Science Ltd offers a calibration service including the issue of a traceable certificate valid for 12 months. A GasCheck Tesla Calibration Kit offers a means of checking and calibrating the instruments against a known reference, however Ion Science Ltd strongly recommend the instrument is returned to an approved service centre on an annual basis for general maintenance and calibration.

Legal Notice

Whilst every attempt is made to ensure the accuracy of the information contained in this manual, Ion Science accepts no liability for errors or omissions, or any consequences deriving from the use of information contained herein. It is provided "as is" and without any representation, term, condition or warranty of any kind, either express or implied. To the extent permitted by law, Ion Science shall not be liable to any person or entity for any loss or damage which may arise from the use of this manual. We reserve the right at any time and without any notice to remove, amend or vary any of the content which appears herein.

Unrivalled Gas Detection. Page 5 of 25

Instrument Description

The GasCheck Tesla is a portable, handheld gas leak detector capable of detecting helium leaks within a high magnetic field, typically surrounding Magnetic Resonance Imaging (MRI) scanners and can be effectively used while the machinery is still in operation. GasCheck Tesla is part of a range of gas leak detectors used for detecting gas leaks, and can detect almost all gases to varying degrees.

Being a hand held instrument it is powered by standard AA size batteries and will accept both Alkaline and Nickel Metal Hydride (rechargeable) types. The GasCheck Tesla uses thermal conductivity as its means of detecting gas which offers a robust sensor technology that requires practically no maintenance beyond annual servicing.

All GasCheck models have an easy to use graphical interface with an intuitive keypad allowing simple function selection and adjustment. The instrument has an LCD display, LED indicator and audible sounder that indicate the detected signal.

Applications where GasCheck instruments are typically used include:

- Medical used by service technicians during maintenance of Magnetic Resonance Imaging (MRI) scanners and testing of membrane materials and sealing of glove boxes.
- Laboratory applications detection of leaks from mass spectrometers and chromatograph equipment.
- Quality assurance testing seal integrity after product manufacture.
- Industrial leaks from gas cylinders, pipe work and process equipment.
- Pneumatic valve seal testing.

The GasCheck Tesla is calibrated against a 5 E-4 cc/s Helium leak to allow volumetric readings and also a 5000ppm helium to allow measurement of concentrations.

Selectable units:

cc/sec	Cubic Centimetres per Second offers a reading that indicates the volume of gas escaping
	into atmosphere from a single point i.e. leakage from a hole in a gas filled vessel or pipe.
ppm	Parts Per Million is a concentration reading, GasCheck Tesla will display the concentration
	being detected however it is more difficult to gauge the quantity of leakage.
mg/m³	Milligrams per meter cubed is also a unit that measures concentration. (See ppm above)
g/yr	Grams per Year is an alternative measure of leak rate.

IMPORTANT NOTES:

GasCheck Tesla is NOT intrinsically safe so should not be using in a potentially explosive environment. An Intrinsically Safe leak detector is available (GasCheck IS). Please contact Ion Science Ltd for more information or visit <u>ionscience.com/gascheck</u>

Ambient air pressure, heat and humidity can affect readings.

The GasCheck Tesla range is NOT 'Gas Specific' i.e. it can NOT differentiate between gases. Selecting a specific gas on the GasCheck Tesla allows the instrument to calculate concentrations and leak rates of that gas <u>only if that gas is being detected.</u>

Unrivalled Gas Detection. Page 6 of 25

Packing list

Please remove all packing material and then check the content of the carry case against the list below before use. Should the instrument or any accessory appear damaged or missing then contact the instrument supplier for advise before use.

Item	Qty	Description	Check
1	1	GasCheck Tesla instrument with short probe and nozzle fitted	
2	1	Long probe	
3	1	Box spanner used to change probes	
4	1	Spare battery clip	
5	1	User manual	
6	1	Calibration certificate	



Unrivalled Gas Detection. Page 7 of 25

How GasCheck Tesla works


Thermal Conductivity

All gases conduct heat but by varying amounts, if an object is heated and then the source of heat is removed, the object will eventually cool down to match ambient air temperature. This action occurs because the ambient air surrounding the object carries the access heat into the surrounding atmosphere. This principal is also the same for objects that are cooler than the surrounding ambient air.

Dissipation of heat into an air atmosphere is known and is a predictable rate however, if the ambient air is replaced with an alternative gas like Helium the rate at which an object cools down changes. If the object mentioned above had its environment replaced with pure Helium it would cool down to the environment temperature about 6 times faster.

The GasCheck Tesla contains a heated thermistor bead that transmits heat to a block of material that remains at a constant temperature. As air passes through the detector chamber a constant amount of heat passes from the bead to the block. Gases that are different to air will affect the rate at which heat transmits from the bead to the block, these rates of change are measured and displayed as leak rates.

The diagram below shows the basic functionality of the GasCheck Tesla 's Thermal Conductivity sensor. A fan draws a small flow of gas through the probe and into the sensing chamber. The thermistor bead heats up when electrical power is applied. As air passes through the cell a constant level of heat is transmitted to a Temperature Stable block through the air, this rate of heat transmission is used to 'Zero' the instrument.

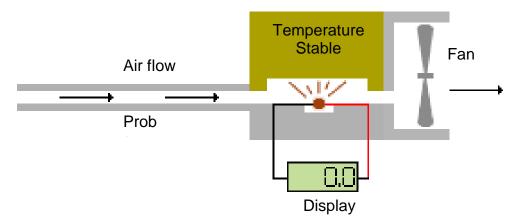

When gases with different thermal qualities pass through the chamber the amount of heat being transmitted to the Temperature Stable block changes. These changes are measured, calculated and displayed on GasCheck Tesla as leak rates or gas concentrations.

PLEASE NOTE:

* Some gases have similar thermal properties to that of air, therefore the GasCheck Tesla can only detect larger concentrations of these gases.


* Some gases have positive and other gases negative signals. To simplify the instruments function GasCheck Tesla only displays changes as positive readings.

* The GasCheck Tesla can NOT differentiate between gases! Selecting a specific gas on the GasCheck Tesla allows the instrument to calculate concentrations of that gas only <u>if that gas is being detected</u>.

Unrivalled Gas Detection. Page 8 of 25

Instrument main menu


Once the GasCheck Tesla has run through its 'Start up' routine it will display its normal 'Running screen' used when locating gas leaks. Before using the instrument the various settings should be set and adjusted to suit the application.

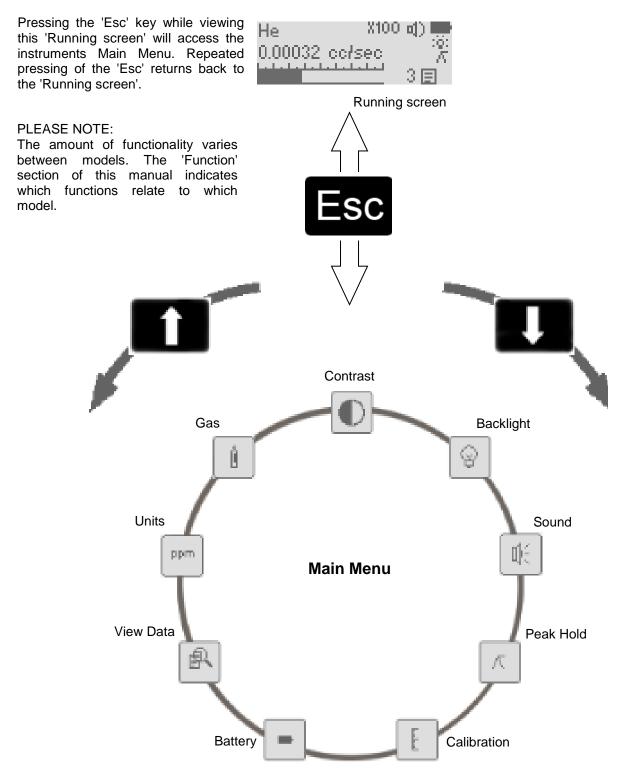

Unrivalled Gas Detection. Page 9 of 25

Running screen

GasCheck Tesla displays the 'Running screen' whenever the instrument is being used to detect leaking gas, the illustration below outlines the various information and icons.

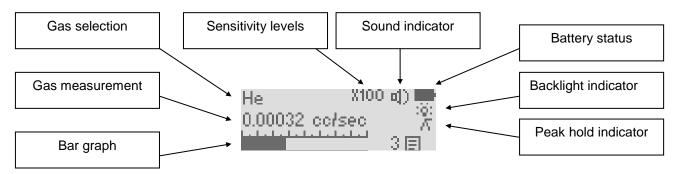

Gas selection

The GasCheck Tesla displays the gas being measured in the top left of the running screen. The GasCheck Tesla will display the gas as selected at the factory, however the GasCheck G3 model has a range of gases that can be selected via an internal gas table.

Sensitivity

GasCheck Tesla has three (3) sensitivity levels, X100 (times one hundred) is most sensitive, X10 (times ten) is mid-range and X1 (times one) is least sensitive. See the sensitivity of various gases on the table under 'Functions (continues), Gas Selection'.

Battery status

When the battery symbol is filled in the battery is full, when just an outline the battery is exhausted.

Backlight

The backlight symbol shows the status of the backlight even in bright daylight.

Gas measurement

The GasCheck Tesla measures the leak rate of gas leakage in which ever units are selected.

Sound indication

This symbol shows if the sounder is on or off, if the semi-circle (on the right) of the symbol is present then the sound is switched on, if not the sounder is switched off. The beep that occurs with each key press cannot be switched off.

Bar graph

The bar graph increases as gas is detected. This graph is not scaled and should be used for indication only. The GasCheck Tesla has no measured units so relies on this bar graph to indicate leakage, when gas is detected and the bar graph has reached its maximum level, a different sensitivity level can be selected to give a wider detection range.

Peak hold


When selected, peak hold displays the maximum measurement on the display. Pressing the ENTER key resets the reading but also logs the peak reading in memory.

Unrivalled Gas Detection. Page 10 of 25

Functions

⑪

山豚



Contrast

Use this function to adjust the contrast of the GasCheck Tesla's LCD (Liquid Crystal Display). Significant variations in ambient temperature conditions can cause the display to appear too dark or faint. When this function is selected a number will appear to the right of the Contrast symbol as a percentage. Use the Up and Down keys to adjust the display contrast to the desired level. When satisfied with the desired level selected, press the Esc key to exit to the main menu.

Backlight

The user can select either Backlight On or Backlight Off. In daylight the user may not be able to determine if the backlight is On or Off therefore a symbol on the main running screen shows the status.

Backlight On
 Backlight Off

When the backlight is 'ON' it significantly reduces battery life. Backlight OFF = 40hrs of use, Backlight ON = 20hrs of use.

Sound

The GasCheck Tesla has an audible sounder that increases frequency as detected gas levels increase. This sounder can be switched On and Off. Use the Up or Down key to move the 'tick' to the desired position and then press the 'Esc' key to return to the Main Menu.



An audible 'beep' can also be heard whenever the key pad is pressed, this beep can not be switched off.

Peak hold

When selected, this function holds the highest detected reading on the display until the 'ENTER' key is pressed.

Select Peak On or Off using the 'Up or Down' key and then press 'Esc' key to exit to the 'Main menu'. When using the GasCheck Tesla, press the ENTER key to clear the held reading. ✓ Peak hold On A Peak hold Off

The reading held on screen will be logged when the 'ENTER' key is pressed. WARNING: *ZEROing the instrument in a contaminated environment will result in false readings.*

Calibration

There are two Calibration settings that can be selected; Factory and Custom. Factory calibration is carried out shortly after manufacture and cannot be adjusted, however Custom calibration offers the ability to calibrate the instrument between annual Factory calibrations. The GasCheck Tesla Zero's its reading at switch on, therefore the Custom calibration routine only has one stage. Also see the 'Calibration' section of this manual.



Unrivalled Gas Detection. Page 11 of 25

Functions

鼑

ppm

ppm



1)0.00005 cc/

2)0.00075 🛓 🗐 3)0.00124 🗐

co/sec 🏑

ppm

gr/yr


mg/m3

sec

Battery selection

The GasCheck Tesla will operate using AA size batteries in either Alkaline (non rechargeable) or Nickel Metal Hydride (Rechargeable).

Select the battery type using the 'Up or Down' key and then press the 'Esc' key to exit to the Main menu.



Failing to select the correct battery type will not damage the instrument or affect it's ability to detect gas, however it will cause the battery indicator to read incorrectly.

View Data

The GasCheck Tesla instrument has the ability to data log 10 readings within its internal memory. To store a reading press the 'ENTER' key while on the main Running screen. When readings are stored in memory a symbol will appear on the Main viewing screen.



ionscience.com

When the memory is full the 'Data' symbol will flash. The stored data can be viewed buy scrolling through the logged readings using the 'Up and Down' keys. To delete the stored data press and hold the 'ENTER' key, the 'Trash can' symbol will flash, continue holding the 'ENTER' key until the data is deleted. Press the 'Esc' key to exit to the Main menu.

Units

GasCheck Tesla instruments have the capability of displaying detected readings in a variation of units; ppm, cc/s, mg/m³ and g/yr.

Use the 'Up and Down' keys to select the desired unit and then press the 'Esc' key to exit to the main menu.

Please note: the Custom Calibration routine automatically selects the type a calibration depending on this setting. See the 'Calibration' section of this manual.

cc/sec = Cubic Centimetres per second offers a volumetric leak rate that directly measures the volume of a gas escaping from a given point, it is also known as ml/sec (Millilitres per second). The GasCheck Tesla can typically detect Helium leaks down to 0.0005 of a cubic centimetre per second.

ppm = Parts per million, this unit indicates a concentration but can't be used to quantify a volume of gas leakage.

mg/m³ = Milligrams per meter cubed, like ppm this unit is also concentration so can't be used to quantify a volume of gas leakage.

g/yr = Grams per year offers an alternative volumetric leak rate that directly measures the volume of a gas escaping from a given point.

Display

GasCheck Tesla instruments have the capability of displaying cc/sec and g/yr readings in either decimal or exponent form. (Readings in ppm and mg/m³ can only be displayed in decimal form.)

ppm 5 x 10E -2 0.05

Use the 'Up and Down' keys to select the desired unit. Press the 'Enter' key to display the next screen. Use the 'Up and Down' keys to select the desired display and then press the 'Esc' key twice to exit to the main menu.

Unrivalled Gas Detection. Page 12 of 25

Functions



Gas selection

GasCheck Tesla is calibrated using Helium gas at manufacture, however other gases can be detected and measured using a gas table within the instrument. Although GasCheck Tesla can't differentiate between gases it can quantify other gases using response factors stored in its internal gas table. Gas groups 0, 1 2, 3, and 4 offer a generic sensitivity.

The following list indicates response factors for specific gases however for advice on gases not listed please contact Ion Science Ltd for advice.

Name	Abbreviation	Minimum sensitivity cc/sec (ml/sec)	Minimum sensitivity cc/sec (ml/sec)
Hydrogen	H2	7.7 E-6 cc/sec	0.0000077 cc/sec
Helium	He	1.0 E-5 cc/sec	0.000010 cc/sec
Refrigerant R12	R12	2.7 E-5 cc/sec	0.000027 cc/sec
Refrigerant R1301	R1301	2.4 E-5 cc/sec	0.000024 cc/sec
Refrigerant R134a	R134a	5.8 E-5 cc/sec	0.000058 cc/sec
Refrigerant R22	R22	2.6 E-5 cc/sec	0.000026 cc/sec
Refrigerant R11	R11	3.2 E-5 cc/sec	0.000032 cc/sec
Sulphur Hexaflouride	SF6	2.2 E-5 cc/sec	0.000022 cc/sec
Carbon dioxide	CO2	4.0 E-5 cc/sec	0.000040 cc/sec
Methane	CH4	2.9 E-5 cc/sec	0.000029 cc/sec
Argon	Ar	3.5 E-5 cc/sec	0.000035 cc/sec
Oxygen	02	2.9 E-4 cc/sec	0.000290 cc/sec
Refrigerant R502	R502	3.0 E-5 cc/sec	0.000030 cc/sec
Refrigerant R404a	R404a	3.2 E-5 cc/sec	0.000032 cc/sec
Refrigerant R407c	R407c	3.3 E-5 cc/sec	0.000033 cc/sec
Refrigerant R410a	R410a	3.2 E-5 cc/sec	0.000032 cc/sec
Refrigerant R507	R507	3.8 E-5 cc/sec	0.000038 cc/sec

To select an alternative gas use the 'Up and Down' keys to select the desired gas and then press the 'ENTER' key to confirm the selection, at which point a tick will appear. Press the 'ENTER or Esc' key to exit into the 'Main menu'.


If the gas to be detected does not appear in the instruments internal gas table then one of the five 'Gas Groups' can be selected. 'Gas Groups' have a variation of sensitivities. (Group 1 being high sensitivity through to Group 5 being low sensitivity) Contact Ion Science Ltd for advice. Gas groups allow the instrument to calculate leak rates with reasonable accuracy.

Unrivalled Gas Detection. Page 13 of 25

Getting started

The Keypad

All GasCheck Tesla models have the same keypads, the following section explains the general functionality of each key:-

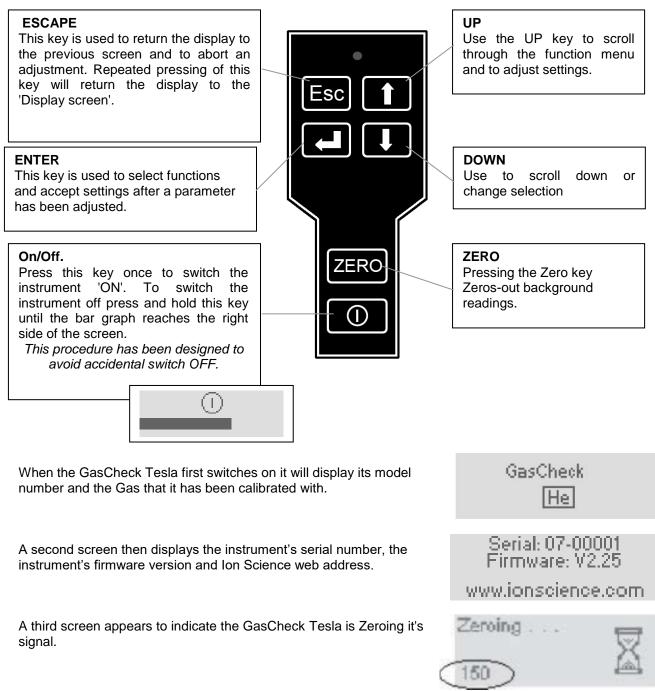

Once the Zero routine is complete the instrument displays it's running screen and is ready for use.

Unrivalled Gas Detection. Page 14 of 25

Using GasCheck Tesla

The GasCheck Tesla instrument

WARNING: Before switching the GasCheck Tesla on, ensure the ambient air is clean as the instrument automatically Zero's the sensor at switch on. After the instrument has run through its start-up routine, adjust the instrument settings to the desired levels. Check the instruments sensitivity using a CalCheck or calibration kit

Switch the GasCheck Tesla on by pressing the ON/OFF key, after the instrument has completed its Zero routine it will enter it's normal running screen. (see right)



ionscience.com

Ensure the instrument is on the X100 (times one hundred) range, while on the main running screen use the UP and DOWN key to adjust between sensitivity ranges. X100 is most sensitive, X1 is the least sensitive.

Gas leaks tend to occur at pneumatic joints or welded seams, hold the GasCheck Tesla at a 45° angle to the object being tested and drag the probe along the seam or joint at a rate of approximately 25mm per second. When a leak is detected the bar graph will start to fill and the frequency of the audio output will increase but will reduce as the probe moves away from the leak. Return the probe to the suspected leaking area and move slowly along the same area until the leak is located, once located the probe should be held at the leak until the numeric reading stabilizes.

The bar graph offers a graphical indication only and should not be used to measure a leak, you may find that the graph completely fills however the numeric reading will continue to increase. Should the instrument detect a leak that is too large for the range selected the numeric screen will flash and display '99999', use the UP or DOWN keys to adjust the instrument sensitivity.

Variation in temperature, humidity and background gas may result in a constant level being detected on the instrument. To reset to Zero, hold the instrument away from the source of contamination and then press the ZERO key. The instruments display will return to a near zero reading.

The following things will affect the instruments reading:-

- * Breath of the instrument user contains both CO2 and moisture;
- * Barometric air pressure and background temperature;
- * Sources of cold and heat.

Unrivalled Gas Detection. Page 15 of 25

GasCheck Tesla fan current montior

Even with magnetic shielding in place, in the presence of strong magnetic fields, the fan inside the GasCheck Tesla will degrade. This degradation is permanent and results in the current drawn by the fan increasing.

There are also temporary effects where the local magnetic field will cause the current drawn by the fan to increase. These effects disappear when the instrument is removed from the magnetic field.


The software inside the GasCheck Tesla prevents leak detection measurements from being taken when the fan is permanently damaged, or if the local field is too high.

The GasCheck Tesla can monitor the current consumed by the fan as it draws air through the detector chamber. This allows the end user to see how much damage has occurred to the fan inside the unit due to the magnetic field. If the current is too high, the unit displays an error message preventing the operator from making measurements of the leak rate.

Refer to Figure 6. The fan current indicator can be found in the bottom left hand corner of the 'Zeroing' screen. The number can range from around 200 units or below on a new unit and can rise to 600 units before the unit displays the error message shown in Figure 7. The 'Zeroing' screen can be accessed at any time by holding down the ' ' key and zeroing the GasCheck Tesla.

Once the error message is displayed, it will remain on the screen until the ' ' key is pressed and the fan current has returned to an acceptable level. In the event of the fan current constantly exceeding 600 units, for example if the GasCheck Tesla fan has reached the end of its working life, the unit will not display the leak rate and the GasCheck Tesla should be returned to Ion Science for servicing.

Figure 6 – Fan current indicator			
Zeroing			
150			





Unrivalled Gas Detection. Page 16 of 25

Probe options

In some applications the grey probe cover may restrict access to the area under test, the grey probe cover can be removed by pulling it off way from the instrument ①. When the grey cover is removed great care should be taken when using the instrument and the following precautions noted:-

* Do not remove the semi-transparent probe sleeve, this sleeve ensure the metal inner probe remains 1 mm from the surface of the test area avoiding accidental dirt and moisture ingress.

* Do not touch the probe and especially the brass sensor housing. Heat from fingers can result in significant changes in signal causing false readings.

* Avoid placing the probe on wet or dirty surfaces, blockage of the probe will result in instrument failure.

Some application may require a longer probe to gain access to pneumatic joints and seams to be tested, the GasCheck Tesla is also supplied with a 300mm probe that can be changed by the user. To change probes carefully follow the following steps:-

- * Switch the instrument OFF
- * Remove the outer grey probe cover **1**
- * Place the box spanner (supplied with the instrument)

over the brass nut 2, unscrew the probe counter-clockwise direction. 3


* Withdraw the spanner and probe assembly **4**

To refit the short or the long probe follow the steps above but in reverse order. CAUTION: When using the box spanner to tighten the probe nut, ensure the nut is firmly tightened however do not use additional tools as the tread may become damaged.

Should a probe become blocked, use dry, clean compressed air to blow out the blockage from the instrument end of the probe.

<u>Cautionary Note</u>: The instrument has been factory calibrated using the standard short capillary which sets a certain flow rate into the detector. The long capillary by nature of its construction has a different flow to improve the time response in detection. This will change the calibration of the instrument when the long probe is used instead of the short capillary. Thus the long probe is only to be used in finding leaks in difficult places where the standard short probe cannot reach. The readings given by the long probe are only qualitative and the reading given by the display is only to be taken as being relative to another value given by another leak site while using the long probe.

WARNING: Ensure safety guidelines are adhered to when using compressed air. (Ion Science Ltd takes no responsibility for injury or damage caused by misuse of compressed air equipment)

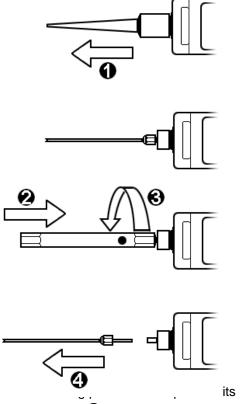

Unrivalled Gas Detection. Page 17 of 25


Overview

Hold the GasCheck Tesla in one hand and draw the instrument probe along the area to be checked at approximately 25mm per second. When a leak is detected retrace the route of the probe at a slower rate until the leak is located.

Once located hold the instrument over the leak until the measurement stabilises. The reading can be logged by pressing the ENTER key.

Some readings may be larger than the instrument can detect and the measurement units will be replaced by '99999' on the display, in which case used the UP or DOWN keys to adjust the instruments sensitivity.

When detecting very small leaks or when detecting gasses less sensitive then a rate of 10mm per second may be required.

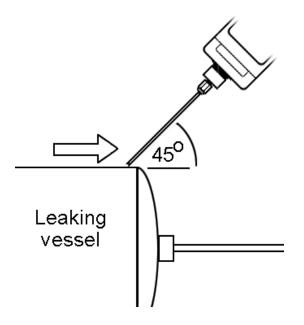

The outer grey probe cover can be removed to allow better access to restricted areas, if the outer probe is removed the following points should be noted:-

* Avoid bending the inner probe as this will affect the GasCheck Tesla 's accuracy.

* Avoid placing the probe in liquid or dirt as the probe can become blocked.

* Care should also be taken to ensure the brass sensor housing component remains at a constant temperature. Avoid touching the brass sensor block with fingers.

* GasCheck Tesla can detect changes in Humidity and Carbon dioxide, therefore avoid breathing on the probe.


* The thin white tube that covers the inner probe should not be removed, this tube ensures a 1mm gap is maintained between the probe and the surface being tested.

Calibration

Over view

The GasCheck Tesla has two selectable calibration settings; Factory and Custom. 'Factory Calibration' is carried out at Ion Science Ltd/ Authorised Service Centres during the instruments manufacture, it can be selected and used but can not be changed. The GasCheck Tesla is calibrated against a 5000 ppm Helium concentration and a 0.0005cc/sec (5 E-4) Helium leak rate.

'Custom Calibration' gives the user the ability to calibrate the instrument, this facility may offer improved accuracy over the 'Factory Calibration' if the Barometric air pressure differs from that stated on the instruments Calibration certificate.

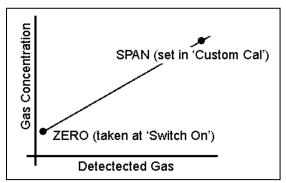

Selecting Factory or Custom Calibration



To select either Factory or Custom Calibration select the Calibration screen and user the UP and DOWN keys to move the 'tick / check' under the desired symbol, then Press the 'Esc' key to exit into the main menu.



'Custom Calibration' can only be selected and used after the instrument has been calibrated by the user, to do this move the 'tick / check' under the 'Custom Cal' symbol and press the ENTER key.


The GasCheck Tesla requires either 5000 ppm Helium concentration or a 0.0005cc/sec (5 E-4 cc/sec) leak rate as a reference. The GasCheck Tesla automatically selects the type of Calibration media based on which units the instrument already has selected.

If the GasCheck Tesla is used to detect leaks measured using 'ppm or mg/m³' units then the instrument must be calibrated using a 5000 ppm Helium concentration.

If the GasCheck Tesla is used to detect leaks measured using 'cc/sec' units then the instrument must be calibrated using a 0.0005 cc/sec (5 E-4) Helium leak.

Calibration procedure using 'ppm' units

Please read this entire procedure before proceeding with this calibration routine.

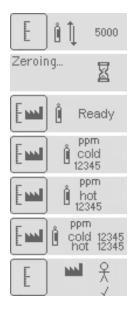

* Fill an empty (uncontaminated) sample bag with 5000 ppm Helium gas before starting the calibration procedure. Also remove the outer grey probe from the GasCheck Tesla.

* Select the 'Custom Cal' symbol from the instruments menu. An option appears allowing the adjustment of the 'ppm' value to ensure the instrument matches the gas concentration being used. Use the UP and DOWN keys to adjust between 4900 and 5100 ppm.

* Ensure the instrument is in clean air and then press the ENTER key, the instrument will Zero, this will take a few seconds but once complete a 'Ready' message will appear.

* Insert the instruments probe fully into the sample bag containing the gas and press the ENTER key. The instrument will automatically sequence through the cold and hot stages of calibration but when finished gives a summary of values.

* Press the ENTER key to return back to the calibration option screen. Press the ESC key to start using the instrument or press the ENTER key to calibrate again.

NOTE: To avoid errors in calibration the following points should be noted:-

* Avoid bending the inner probe as this will affect the GasCheck Tesla 's accuracy.

* GasCheck Tesla can detect changes in Humidity and Carbon dioxide, therefore avoid breathing on the probe.

* Avoid pressurizing the sample bag as this will cause significant errors in reading

Unrivalled Gas Detection. Page 19 of 25

Calibration

Calibration procedure using 'cc/sec' units

Please read this entire procedure before proceeding with this calibration routine.

Zeroin	^j 2	l		
	🖞 Read	У		
E L cold 12345				
E ➡ ů cołsec hot 12345				
	col/sec cold 12 hot 12	345 345		
E	M 8	-		

* Follow the instructions of the CalCheck unit, the pointer of the pressure gauge must resting over the green segment.

* select the 'Custom Cal' symbol from the instruments menu.

* Ensure the instrument is in clean air and then press the ENTER key, the instrument will Zero, this will take a few seconds but once complete a 'Ready' message will appear.

* Insert the instruments probe into the CalChecks outlet and press the ENTER key. The instrument will automatically sequence through the cold and hot stages of calibration but when finished gives a summary of values.

* Pressing the ENTER key will return back to the calibration option screen. Press the ESC key to start using the instrument or press the ENTER key to recalibrate again.

NOTE:

* GasCheck Tesla can detect changes in Humidity and Carbon dioxide, therefore avoid breathing on the probe.

Part No.	Description	Used
A-21500	0.0005 cc/sec Helium Calibration kit	For when GasCheck Tesla is used with cc/s units

WARNING: Great care should be taken to ensure the calibration gas is neither pressurised or restricts flow to the instruments probe. Changes in flow of gas to the sensor will result in significant errors in readings.

Unrivalled Gas Detection. Page 20 of 25



Replacing batteries

Before using the GasCheck Tesla instrument ensure the batteries are fitted correctly or ensure NiMH (rechargeable) batteries are fully charged before use.


To fit or replace batteries you must first remove the battery cover from the rear of the instrument. This can be done by prising open the battery clip with a finger nail or screw driver.

Removing the battery cover will reveal a battery holder, which requires 4 x AA size batteries. Before removing old batteries or fitting new ones unclip the battery holder from the instrument by prising apart the PP3 type clip shown in the illustration.

Once the battery holder is disconnected from the instrument, the batteries can be removed or replaced however care must be taken when refitting the batteries to ensure they are the correct polarity, polarity markings are moulded on to the battery holder plastic.

The battery holder can be reconnected to the GasCheck Tesla by firmly pressing the two halves of the PP3 clip together. Care should be taken to ensure the polarity is correct, see the PP3 diagram (right).

The battery pack is then laid within the instrument and the battery cover refitted, be careful not to trap wires when refitting the battery cover.

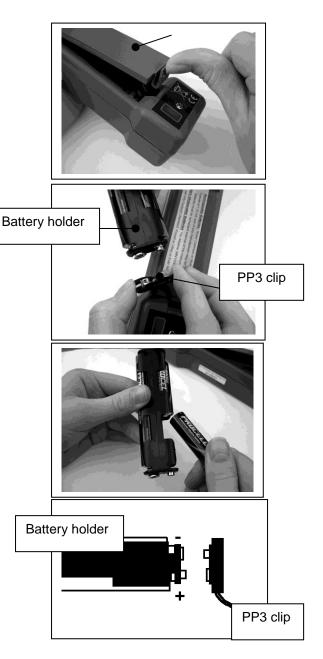

Instrument specification

Operating temperature	0 to 50 °C	32 to 122 °F
Storage temperature	-25 to 70 °C	-13 to 158 °F
Instrument case	Polyurethane	
Dimensions	L.390 x W.60 x H.50 mm	L15.35" x W2.35" x 2.0 "
Weight	0.5 kg	1.0 lb.
Ingress ratings	IP20	
Length of long probe	300 mm	12"
Detection type	Thermal conductivity	
Detection time to T90	1 sec (Short probe)	9 sec (long probe)
Clear down time	1 sec (Short probe)	9 sec (long probe)
Battery type	Alkaline or NiMH AA (Qty 4)	
Battery life at 20 °C (68 °F).	40 Hours (20 hours when using	the backlight)

Unrivalled Gas Detection. Page 22 of 25

Replacement parts

Part	Item Number
Long probe	A-08045
Short probe	A-08043
Replacement battery holder 3000	1/BH-01
Nozzle	08024CPC8
Box Spanner	A-08029
Accessory	Item Number
CalCheck	A-21500 (specifying gas, leak rate and pressure)

Unrivalled Gas Detection. Page 23 of 25

Instrument warranty and service

Warranty

Standard Warranty can be extended to up to 2 years on the GasCheck Tesla when registering your instrument via our website: <u>ionscience.com/instrument-registration</u>

To receive your Extended Warranty, you need to register within one month of purchase (Terms and Conditions apply). You will then receive a confirmation email that your Extended Warranty Period has been activated and processed.

Full details, along with a copy of our Warranty Statement can be found by visiting: ionscience.com/instrument-registration

Service

At Ion Science we recommend that all of our gas detection instruments be returned for service and factory calibration once every 12 months.

Contact Ion Science or your local distributor for service options in your area.

Find your local distributor by visiting: ionscience.com

Contact details

UK Head Office

Ion Science Ltd The Hive, Butts Lane, Fowlmere Cambridge SG8 7SL UK Tel: +44 (0)1763 207206 Fax: +44 (0) 1763 208814 Email: info@ionscience.com Web: ionscience.com

Italian Office

Ion Science Italia Via Emilia 51/c 40011 Anzola Emilia Bologna ITALY **Tel:** +39 051 0561850 **Fax:** +39 051 0561851 **Email:** info@ionscience.it Web: ionscience.it

USA Office

Ion Science Inc 4153 Bluebonnet Drive Stafford TX 77477 USA Tel: +1 (877) 864 7710 Fax: +1 802 244 8942 Email: info@ionscienceusa.com Web: ionscience.com

German Office

Ion Science Messtechnik GMBH Laubach 30 Metmann-Neandertal 40822 GERMANY Tel: +49 2104 14480 Fax: +49 2104 144825 Email: info@ism-d.de Web: ism-d.de

Unrivalled Gas Detection. Page 24 of 25

<u>Manual log</u>

Manual Version	Amendment	Date updated	Instrument Firmware	PC Software
GasCheck Tesla V1.1	Manual created	20/03/13	V1.39	N/A
GasCheck Tesla V1.1R	Logo	31/07/17	V1.39	N/A

Part number: 849215

Unrivalled Gas Detection. Page 25 of 25